


SIDEWALK ACCESS RAMP

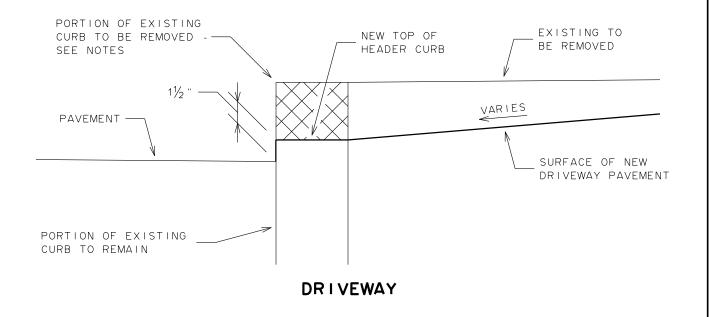

NOTES:

- 1. RESHAPE TOP OF EXISTING CURB BY SAW CUTTING HORIZONTALLY WITH POWER SAW. SAW CUT FULL WIDTH OF CURB, ALONG NEAT STRAIGHT LINES.
- 2. TOP OF CURB IS TO BE SAW CUT EITHER FLAT ACROSS, OR ON 1:12 SLOPE.
- 3. TOP OF CURB IS TO BE MILLED OR GROUND FINISHED TO SMOOTH SURFACE FREE FROM BURRS, NICKS OR OTHER MARKINGS OR DAMAGE FROM SAW CUTTING OPERATION.
- 4. CURB JOINTS ARE TO BE RE-POINTED WITH MASONRY MORTAR MIX.

MODIFY EXISTING CURB ISSUED 4-7-95 REVISED 2-25-14 DWG.NO.S609-9